
# **#20A Door Latch** Installation Instructions

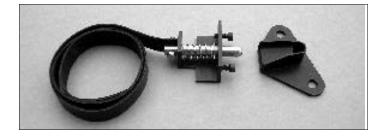



### **Mounting Striker Plate:**

 There are 2 striker plates, a left and a right. Mount striker plates, with bolts from factory striker plate, so that the latch mechanism is parallel with the ground as indicated in the view on the right.
Locate striker plate in the center (height and lateral) of the available adjustment provided by the factory attachment points and tighten.

## Mounting Door Latch Pin Assembly:

1. Measure the distance from the top of the door jam to the center of the striker plate receiving hole (see f1 at right).

2. Measure the distance from the outside of the door jam to the center of the striker plate receiving hole (f2)

3. Transfer dimensions to back of door jam and drill .385" - .395" diameter hole at that point for the door latch pin.

4. Drill two .200 diameter holes in a horizontal plane with the .385" - .395" diameter hole to mount door latch pin assembly to door.

## **Door Alignment:**

1. Close door and check height and lateral alignment and adjust striker plate as needed.

## 911R Leather Door Opener

Use supplied fastner and attach leather door opener to a convenient place on the door and make sure it does not interfere with your roll cage. Simply pull leather strap and door will open.





